

RS232 Interface Manual Addendum

Please check the following items in your owner's manual:

Inside Front Cover

The default value shown for ECHO OFF under the **Open/List** column in the SOFTWARE SWITCH OPTION DEFAULT VALUES table should be Echo is on. This line should read:

Option	Open/List	Old/Save
.	.	.
.	.	.
ECHO OFF	Echo is on	Option not allowed
.	.	.
.	.	.
.	.	.

Page 10

The above information needs to be verified on page 10.

Page 23

The **Parity** definition in the glossary should read as follows:

Parity A means for insuring that the data received matches the data transmitted. This data checking method is used to verify that the total number of "on" bits per characters is always even or always odd, thus enabling parity checks to be made to test for accurate data.

Additional Information

- In order to allow for proper cooling, we recommend you do not place the modem or any other object on top of your RS-232 Interface unit.
- The plug-in connector on the back of your RS-232 Interface closest to the computer console is "Port 1."
- Your interface unit may not fully meet the EIA RS-232C specification when connected to a high input capacitance device (2500pF) and operating at 9600 baud rate. If you experience problems under these conditions, we advise you to use a lower baud rate.